


Trident DF/SF STICK SIGN CABINET LIGHTING INSTALLATION GUIDE

CHANNEL LETTER LED LIGHTING


TRIDENT SF/DF STICK INSTALLATION DIAGRAM

Put Trident SF/DF Stick in sign bow(or sign cabinet), use VHB or screw to fix brackets, both add silicone for fastness and security, please pay attention to measure the spacing (see Figure)

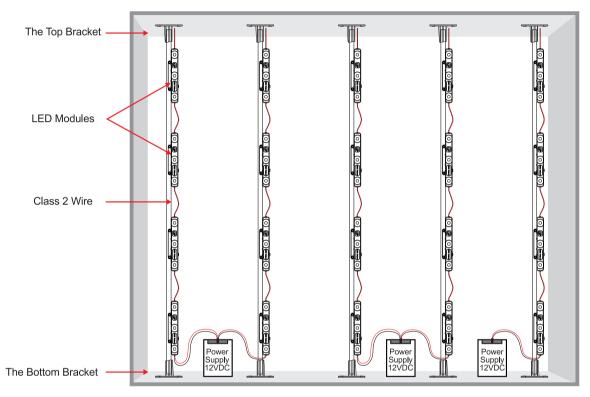

^{*}Use the same way to installation Trident SF Stick too.

Wiring and installation diagram

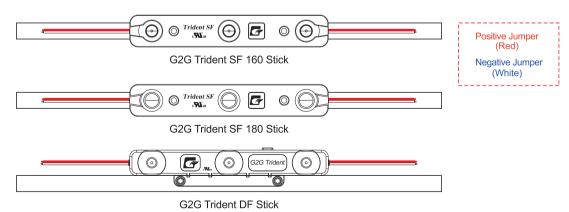




ALL COMPONENTS C TUS www.g2glighting.com

INSTALLATION GUIDE

LED LIGHTING

WIRING DIAGRAM

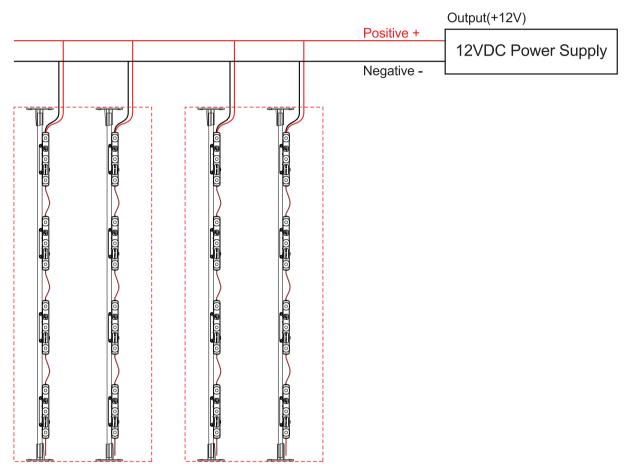

^{*}Use the same way to installation Trident SF Stick too.



LED LIGHTING

TRIDENT SF/DF STICKS PLICING GUIDE **G2G Trident DF Stick**

Regular Size

Part NO.	Size	Power Consumption
Trident DF Stick 18IN	386mm(15.2in)	9W
Trident DF Stick 42IN	994mm(39.2in)	18W
Trident DF Stick 64IN	776mmX2(30.6inX2)	27W
Trident DF Stick 2FT	537.5mm(21.2in)	9W
Trident DF Stick 4FT	1147mm(45.2in)	18W
Trident DF Stick 6FT	877mmX2(34.5inX2)	27W
Trident DF Stick 8FT	1180.5mmX2(46.5inX2)	36W
Trident DF Stick 10FT	1498mmX2(59inX2)	45W

Part NO.	Size	Power Consumption
Trident DF Stick 3FT	1 FT add on parts + Stick 2FT	13.5W
Trident DF Stick 5FT	1 FT add on parts + Stick 4FT	22.5W
Trident DF Stick 7FT	1 FT add on parts + Stick 6FT	31.5W
Trident DF Stick 9FT	1 FT add on parts + Stick 8FT	40.5W

Part NO.	Size	Power Consumption
1 FT add on parts	12IN	4.5W

G2G Trident SF Stick


Regular Size


Part NO.	Size	Power Consumption
Trident SF Stick 18IN	386mm(15.2in)	6W
Trident SF Stick 42IN	994mm(39.2in)	12W
Trident SF Stick 64IN	776mmX2(30.6inX2)	18W
Trident SF Stick 2FT	537.5mm(21.2in)	6W
Trident SF Stick 4FT	1147mm(45.2in)	12W
Trident SF Stick 6FT	877mmX2(34.5inX2)	18W
Trident SF Stick 8FT	1180.5mmX2(46.5inX2)	24W
Trident SF Stick 10FT	1498mmX2(59inX2)	30W


Part NO.	Size	Power Consumption
Trident SF Stick 3FT	1 FT add on parts + Stick 2FT	9W
Trident SF Stick 5FT	1 FT add on parts + Stick 4FT	15W
Trident SF Stick 7FT	1 FT add on parts + Stick 6FT	21W
Trident SF Stick 9FT	1 FT add on parts + Stick 8FT	27W

Part NO.	Size	Power Consumption
1 FT add on parts	12 I N	3W

How to make a 5FT





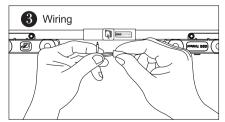





LED LIGHTING

RETROFIT INSTALLATION-1

- 1, Cut off power supply
- 2, Take down the tubes

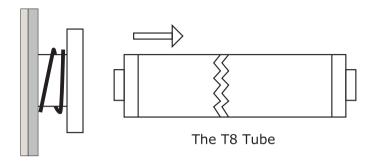

Put aluminum rod in the mounting head

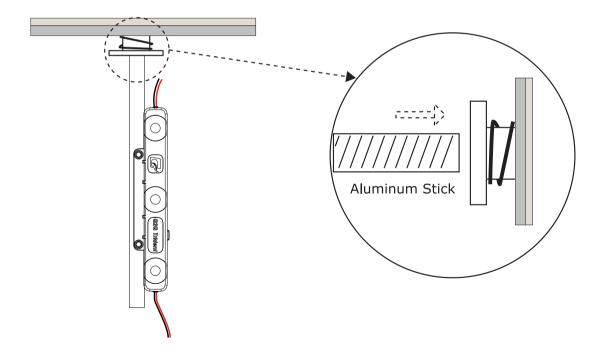





LED LIGHTING

RETROFIT INSTALLATION-2

If the T8 tube's support base like "Diagram A" You need to use HO sockets to install trident DF/SF stick.

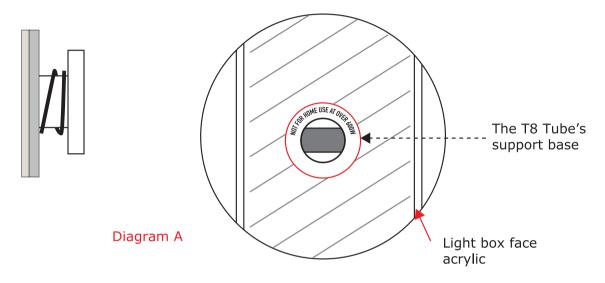

In this condition, you can make the trident stick DF/SF face to The acrylic board correctly with the HO sockets.

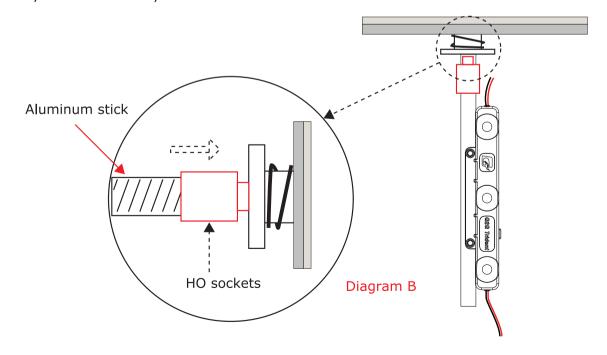



INSTALLATION GUIDE


CHANNEL LETTER LED LIGHTING

NEW INSTALLATION


Fix the upper bracket and lower bracket



Put aluminum rod into bracket from side

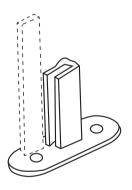

Please pay more attention to The spacing when you install it

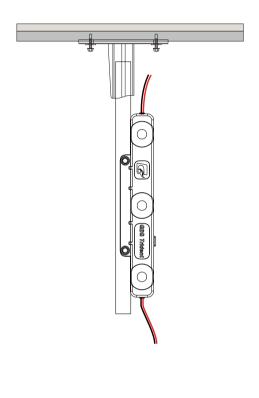

64In,6Ft,8Ft and 10Ft aluminum rod need to use the joining bracket



